

Electromagnetic metering pumps Automatic air vent type

The optimum for gaseous liquid feeding




Electromagnetic metering pumps

This type equips automatic air vent mechanism. An air vent valve built-in pump chamber enables reliable air venting. Also equipped manual air vent valve enables easy pressure release in discharge piping. Gaseous liquid such as sodium hypochlorite or hydrogen peroxide can be injected without gas locking.

- Entrained air is automatically expelled from the pump head. No special degassing is needed.
- The pump immediately resumes operation without gas lock even after a long period of stoppage.
- Use the air vent port manually for quick release of discharge line pressure.
- Capable of pumping concentrated sodium hypochlorite




Principle of operation

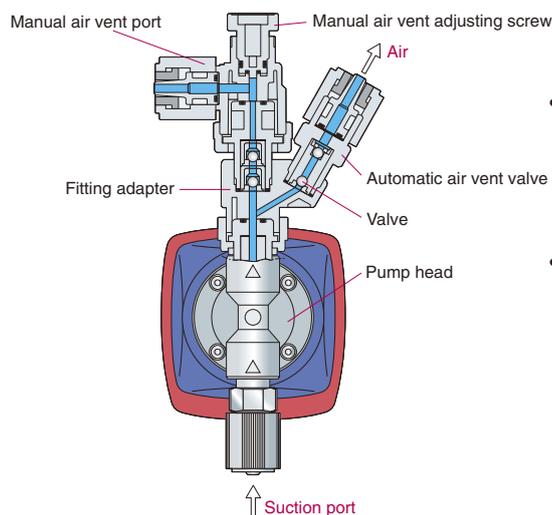


- Air which comes from suction port goes to the connection adapter through pump head. Because pump discharge side is pressurized, air goes to the automatic air vent valve which the pressure load is lower than pump discharge side, and goes out little by little together with liquid.
- Once the pump gets out of locked air condition, it returns to normal operation to discharge the liquid. A little bit of liquid is discharged from automatic bleed valve, too.



Pump identification

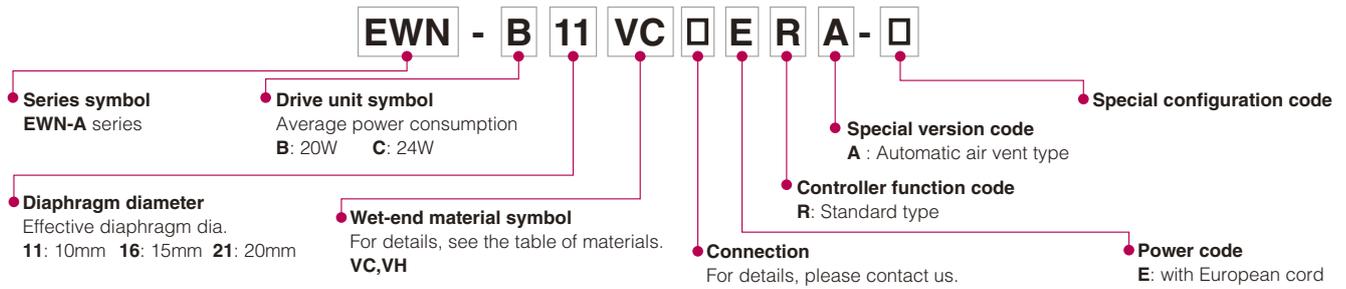

Wet-end materials

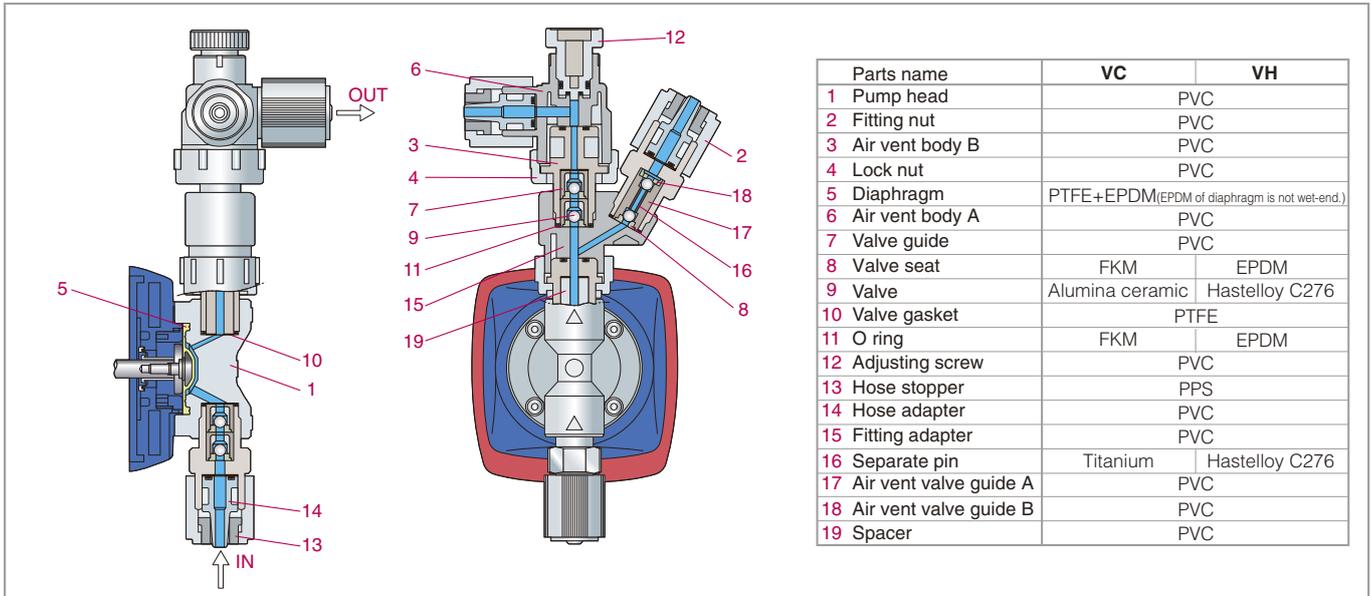


Specifications of pump

Model	EWN-B11	EWN-B16	EWN-C16	EWN-C21	
Capacity	mL/min	30	55	65	110
Discharge capacity per shot	mL/shot	0.04-0.08	0.08-0.15	0.07-0.18	0.12-0.31
Rated discharge pressure	MPa	1.0	0.7	1.0	0.7
Stroke length adjustable range	%	50-100		40-100	
Stroke rate	% (spm)	0.1-100 (1-360)			
Standard connection (Hose dia)	mm	ø4×ø6			
Current	A	0.8		1.2	
Average power consumption	W	20		24	
Power Voltage		100 - 240 VAC 50/60Hz			

Note 1: Each discharge capacity shown above is at the discharge pressure (stroke length 100%, stroke rate 100%) and increases as a discharge pressure reduces.
 Note 2: The performance is based on pumping clean water at ambient temperature at rated voltage.
 Note 3: Liquid temperature range: VC/VH types -10 to 40 °C
 Liquid characteristics must not change (viscosity, freezing or slurries contained)

Dimensions in mm

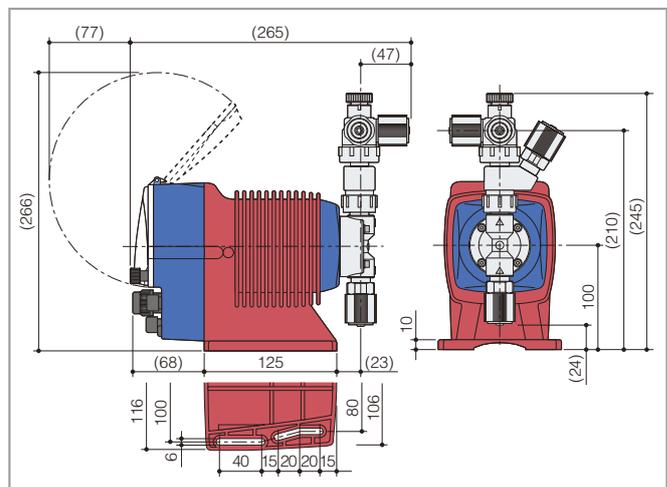

www.iwakipumps.jp

IWAKI CO., LTD. 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan TEL : (81)3 3254 2935 FAX : 3 3252 8892

EUROPE / U.S.A.

European office : IWAKI Europe GmbH TEL: (49)2154 9254 0 FAX: 2154 9254 48
 Austria : IWAKI (Austria) GmbH TEL: (41)26 674 93 00 FAX: 26 674 93 02
 Belgium : IWAKI Belgium N.V. TEL: (32)13 67 02 00 FAX: 13 67 20 30
 Denmark : IWAKI Nordic A/S TEL: (45)48 24 2345 FAX: 48 24 2346
 Finland : IWAKI Suomi Oy TEL: (359)9 2745810 FAX: 9 2742715
 France : IWAKI France S.A. TEL: (33)1 69 63 33 70 FAX: 1 64 49 92 73
 Germany : IWAKI Europe GmbH TEL: (49)2154 9254 50 FAX: 2154 9254 55
 Holland : IWAKI Holland B.V. TEL: (31)547 293 160 FAX: 547 292 332
 Italy : IWAKI Italia S.R.L. TEL: (39)02 990 3931 FAX: 02 990 42888
 Norway : IWAKI Norge AS TEL: (47)66 81 16 60 FAX: 66 81 16 61
 Spain : IWAKI Iberica Pumps, S.A. TEL: (34)943 630030 FAX: 943 628799
 Sweden : IWAKI Sverige AB TEL: (46)8 511 72900 FAX: 8 511 72922
 Switzerland : IWAKI (Schweiz) AG TEL: (41)26 674 93 00 FAX: 26 674 93 02
 U.K. : IWAKI Pumps (UK) Ltd. TEL: (44)1743 231363 FAX: 1743 366507
 U.S.A. : IWAKI America Inc. TEL: (1)508 429 1440 FAX: 508 429 1386

ASIA / OCEANIA

Australia : IWAKI Pumps Australia Pty Ltd. TEL: (61)2 9899 2411 FAX: 2 9899 2421
 China
 Hong Kong : IWAKI Pumps Co., Ltd. TEL: (852)2607 1168 FAX: 2607 1000
 Shanghai : IWAKI Pumps (Shanghai) Co., Ltd. TEL: (86)21 6272 7502 FAX: 21 6272 6929
 Guangzhou : GFTZ IWAKI Engineering & Trading Co., Ltd. TEL: (86)20 8435 0603 FAX: 20 8435 9181
 Beijing : GFTZ Iwaki Engineering & Trading Co., Ltd. (Beijing office) TEL: (86)10 6442 7713 FAX: 10 6442 7712
 Korea : IWAKI Korea Co., Ltd. TEL: (82)2 2630 4800 FAX: 2 2630 4801
 Malaysia : IWAKI M Sdn. Bhd. TEL: (60)3 7803 8807 FAX: 3 7803 4800
 Singapore : IWAKI Singapore Pte Ltd. TEL: (65)6316 2028 FAX: 6316 3221
 Indonesia : IWAKI Singapore (Indonesia Branch) TEL: (62)21 6906606 FAX: 21 6906612
 Taiwan : IWAKI Pumps Taiwan Co., Ltd. TEL: (886)2 8227 6900 FAX: 2 8227 6818
 Thailand : IWAKI (Thailand) Co., Ltd. TEL: (66)2 322 2471 FAX: 2 322 2477
 Vietnam : IWAKI Pumps Vietnam Co., Ltd. TEL: (84)613 933456 FAX: 613 933399



⚠ Caution for safety use: Before use of pump, read instruction manual carefully to use the product correctly.
 Actual pumps may differ from the photos. Specifications and dimensions are subject to change without prior notice. For further details please contact us.

⚠ Legal attention related to export.

Our products and/or parts of products fall in the category of goods contained in the Export Trade Control Order Attachment List 1 of Japanese export control regulations, which includes complementary export control items. Please be reminded that export license, which is issued by the Ministry of Economy, Trade, and Industry in Japan could be required when products are exported from Japan.